


# RUGGED COVER


## Vinyl Snap Tonneau Cover Installation Instructions

### A Putting Frame Together On Truck

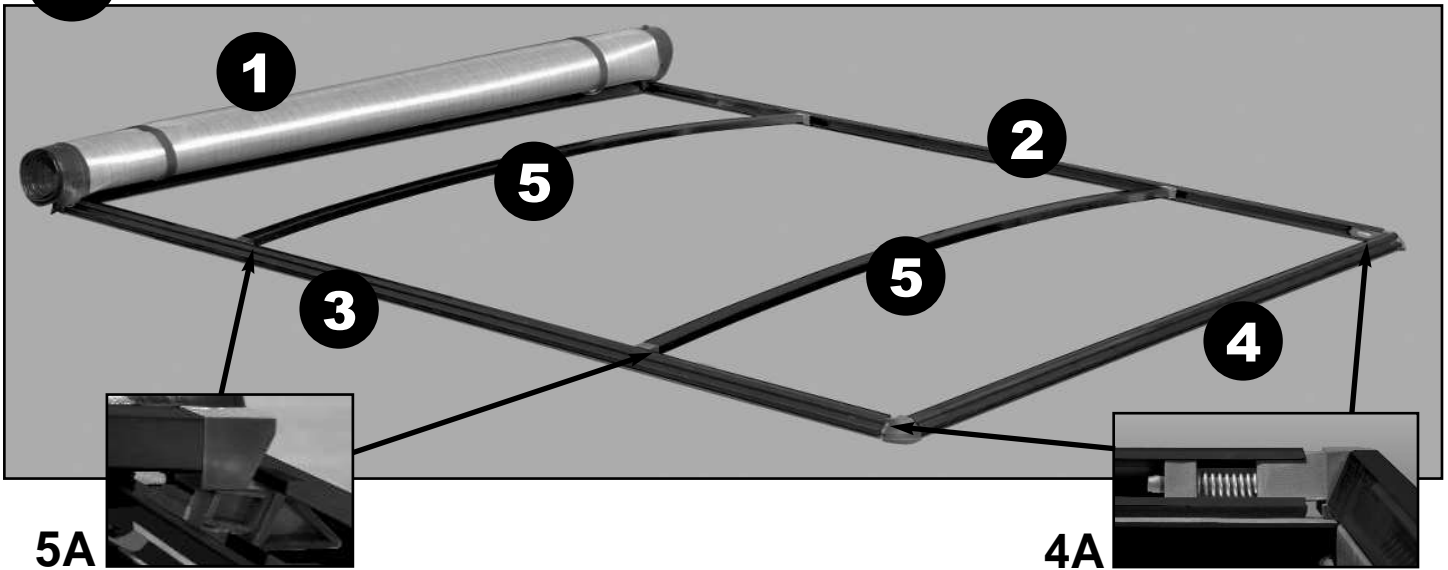


1. Frame piece (1) has cover already attached.
2. Attach side rail (2) by pushing the end marked cab into the corner piece of front rail (1) passenger side.
3. Attach side rail (3) by pushing the end marked cab into the corner piece of front rail (1) drivers side.
4. Attach rear rail (4) by pushing the tensioner (4A) end into both ends of rails. (2 & 3 Labeled tail)
5. Snap bows (5A) into place. (Labeled cab/middle/tail)

### B Attaching Frame To Bed Rail

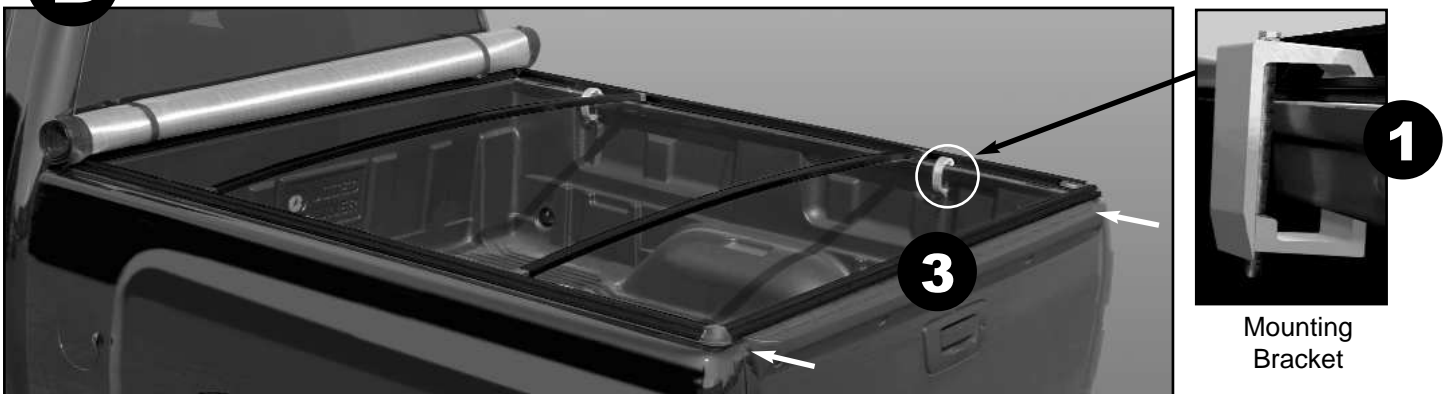

1. Attach frame work to your truck bed with mounting clamps provided with tonneau cover. Position clamps at marked locations on side frame rails. Make sure that the frame rails are square on top of bed rails.
2. Unroll your cover and start snapping from the front to the rear.
3. Compress rear bar tensioner (3) for ease of snapping.

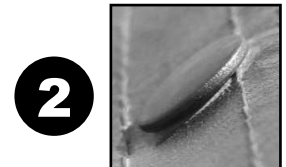

### Rugged Liner

951 Aiken Rd. • Owosso, MI 48867 • 989-725-8354 • Fax: 989-725-8409 • [www.ruggedliner.com](http://www.ruggedliner.com)

FOR MORE INFORMATION CALL

**1-800-433-3604**