

RUGGED COVER

Vinyl Tri-Fold Cover Installation Instructions




1

1. Place the cover on front of truck bed.




7

7. Cover is laying down flat.

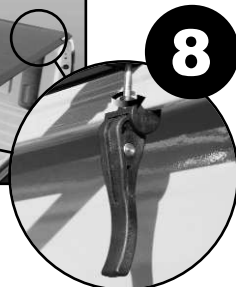

8

8. Secure rear clamps for a tight fit.

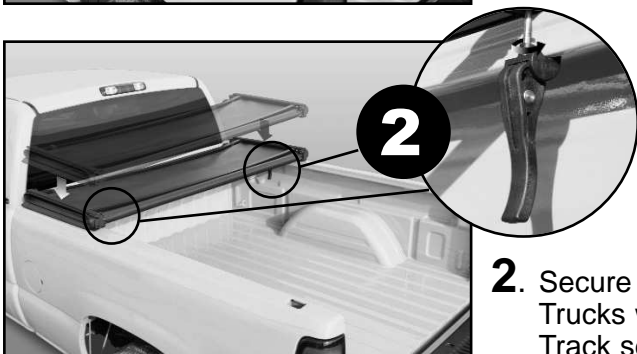


2

2. Secure front clamps. Trucks with Utility Track see Step 9.

9. Vehicles With Utility Track


- All Toyota Tacoma or Tundra Pickups.
- 2007 GMC/Chevy Pickups
- 2008 Ford Pickups
- 2008 Nissan Pickups
- 2008 Dodge Pickups

Use aluminum block to attach cover by sliding into place and locking clamping on to blocks. *(See Back For Details)*

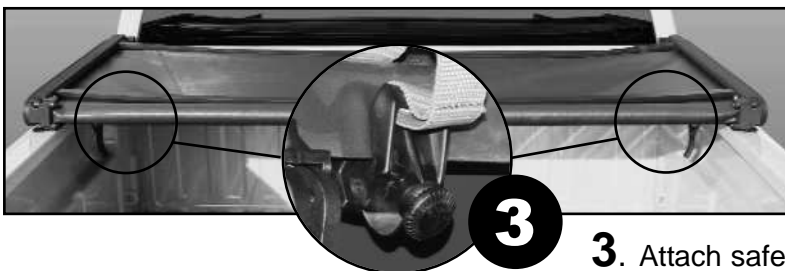


3

3. Attach safety tether strap on both sides.

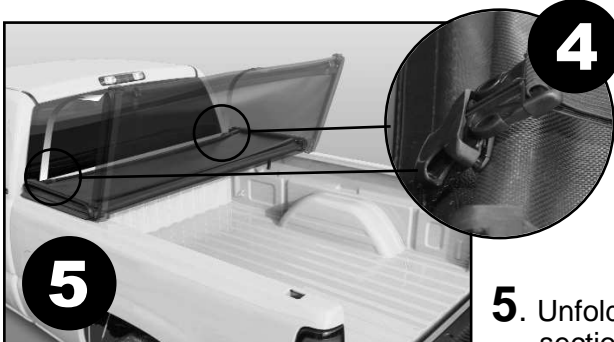

4

4. Undo both clips so cover can be unfolded.

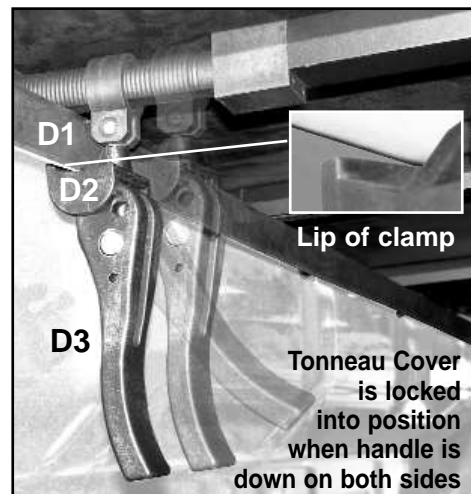

Lip of clamp

Tonneau Cover is locked into position when handle is down on both sides

2&7. To clamp cover down, put lip of clamp under side bed rail and push handle down. *(See D1, D2, D3)*



5

5. Unfold first section.



Use orange clip to store clamp when cover is folded.

6

6. Unfold second section.

How To Adjust Clamps

- The clamps might need adjusted.
- To adjust, turn handle on clamp clockwise to tighten or counter clockwise to loosen.




951 Aiken Rd. • Owosso, MI 48867 • 989-725-8354
Fax: 989-725-8409 • www.ruggedliner.com

Patent Pending


**FOR MORE INFORMATION CALL
1-800-433-3604**

9 GM Pickups with Utility Track

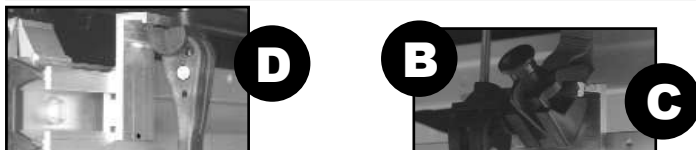


- A.** Slide aluminum blocks into track, position and tighten set-screw.
- B.** Secure front clamp on to aluminum block.
- C.** Attach safety strap on both sides to aluminum block.
- D.** Attach rear clamps

9 Nissan Pickups with Utility Track

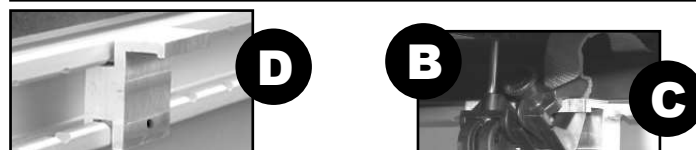



- A.** Slide aluminum blocks into track, position and tighten set-screw.
- B.** Secure front clamp on to aluminum block.
- C.** Attach safety strap on both sides to aluminum block.
- D.** Attach rear clamps

9 Dodge Pickups with Utility Track

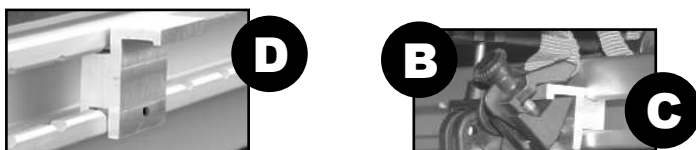

- A.** Slide aluminum blocks into track, position and tighten set-screw.
- B.** Secure front clamp on to aluminum block.
- C.** Attach safety strap on both sides to aluminum block.
- D.** Attach rear clamps

9 Toyota Pickups with Utility Track

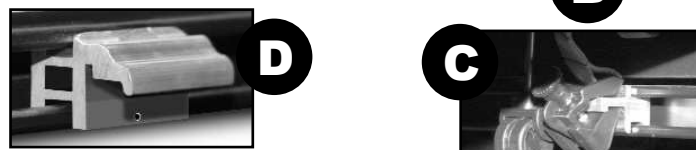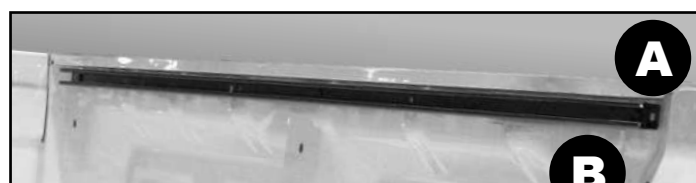

- A.** Loosen rear bolt on utility track and slide aluminum blocks into track.
- B.** Re-tighten rear bolt. Then position and tighten blocks with set-screw.
- C.** Secure front clamp & safety strap to aluminum block on both sides.
- D.** Attach rear clamps.


9 Ford Pickups with Utility Track



- A.** Slide aluminum blocks into track, position and tighten set-screw.
- B.** Secure front clamp on to aluminum block.
- C.** Attach safety strap on both sides to aluminum block.
- D.** Attach rear clamps

10 Useful Information.

- A.** If there is a gap from the corner to the edge of the wing tailgate piece when the cover is fastened. (1) You can put an extra foam corner piece on the back existing corner pieces. (2) Take the roll of foam and measure from the edge of the tailgate piece to the edge of the corner piece on both sides, cut and stick to existing foam.

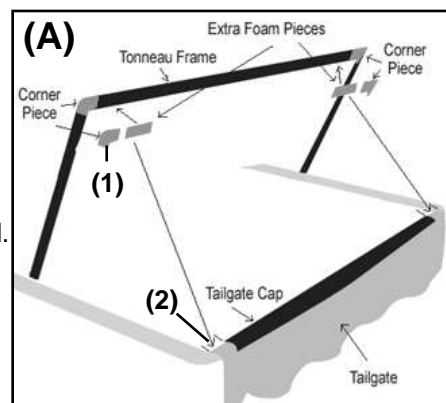

- B.** Or, Replace the Wing Style Tailgate Piece with a Flatter Style Tailgate Piece.