



# INSTALLATION INSTRUCTIONS

## REAR WHEEL WELL INNER LINER FORD F-150

### MODELS 2004 - 2005

**List of Contents:**


LIK 37

**Qty:**

- 1 Pc. Rear Wheel Well Inner Liner, Passenger Side
- 1 Pc. Rear Wheel Well Inner Liner, Driver Side



- 1 Pc. Installation Kit
  - \* 2 pc. Plastic Push Pin (Large)
  - \* 4 pc. Plastic Push Pin (Small)
  - \* Installation Instructions.



**Required Tools:**

- \*Ratchet with socket of 10 mm
- \*Utility Knife
- \*Electric drill with 1/4" drill bit
- \*Easy Removal Tool



**Preparations:**

- \*Remove the tires for easy installation
- \*Clean the interior panels of the rear Wheel house

**Technical Support phone line:**  
**1-800-433-3604**

**Instructions:**

Installation time estimated: 30 min.

**1. PLEASE READ INSTRUCTIONS CAREFULLY BEFORE STARTING THE INSTALLATION.**

**NOTE:** One person installation.

**Starting on the Driver's Side:**

**2.** Locate the top support bracket and remove the interior bolt using the wrench with 10mm socket (see fig A & B).








"keep the bolt in a safe place"

**3.** Using an electric drill with 1/4" drill bit, drill a hole in center of the marked circle, located on the bottom corner of the sheet metal. (See fig. C).

**4.** With the help of an easy removal tool, remove the lower plastic push pin, and discard. (See fig. D).

**5.** Trim the excess length of the lower plastic push pin, leaving approx. 1/8" of the length on the rear side. (see fig. E).

**6.** Using an electric drill with 1/4" drill bit, drill a hole in center of the dimple marked as (04), located on the rear face of the plastic protector. (See fig. F).

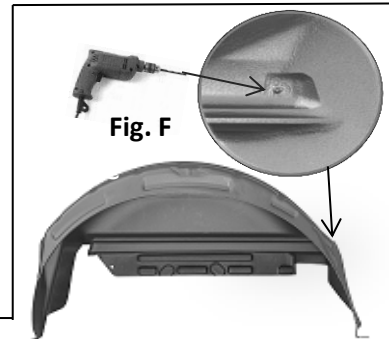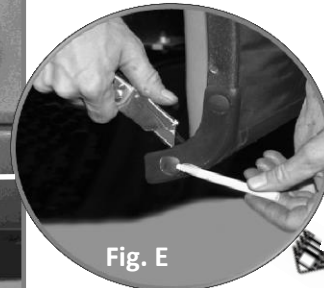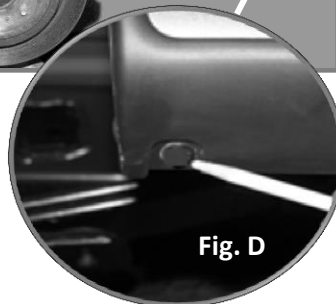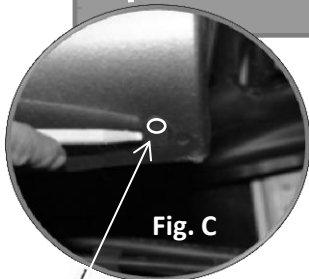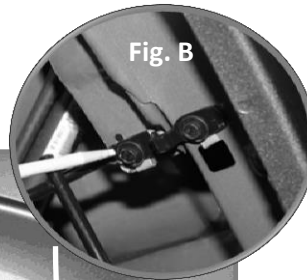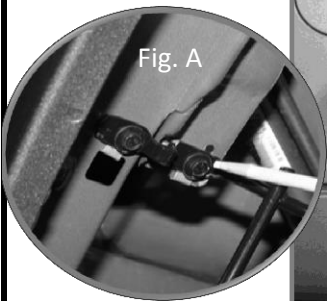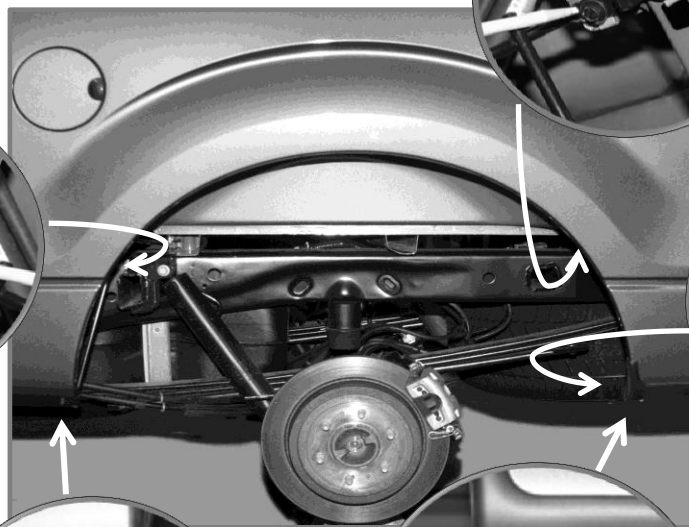




# INSTALLATION INSTRUCTIONS

## REAR WHEEL WELL INNER LINER FORD F-150


### MODELS 2004 - 2005

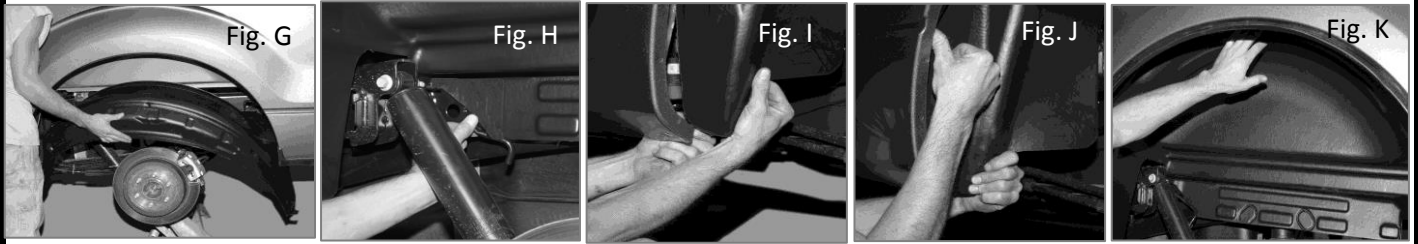

- 7. a)** Place the Rear Wheel Well Inner Liner marked as "DS" (Driver side) inside the wheel house opening; Make sure to go up & over the shock and the mounting bracket first. (See Fig. G & H)
- b)** Insert the bottom corners behind the bottom flange of the fender. (see fig. I)
- c)** Insert the upper profile edge of the plastic liner making sure that is mounted behind the flange and around the wheel well house edge (see fig. J & K)

**8.** Attach the plastic liner to the inner wheel house using the bolts saved in the steps 2. (See fig. L & M)

**9.** Install one small plastic push pins through the hole that was drilled in the step 3 and the pre-drilled tab hole in the plastic protector. (See fig. N)

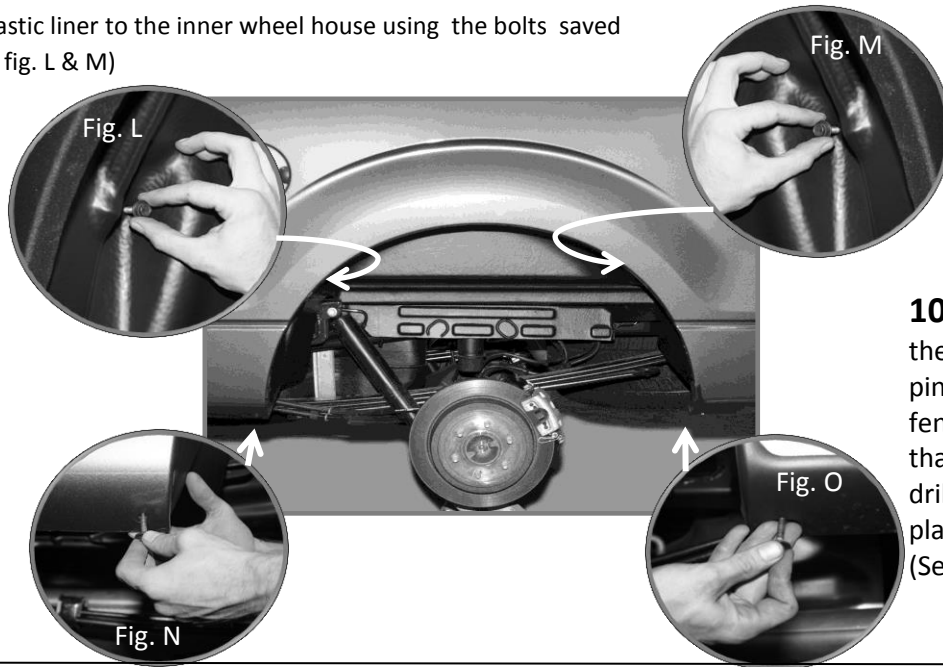

**10.** Install one of the 4 plastic push pins, across the fender lower hole that and the pre-drilled hole in the plastic protector. (See fig. O)

**11.** To install the *Passenger's Side*, repeat all the above steps. using the Rear Wheel Well Inner Liner marked as "PS" (Passenger side)

**12.** Re-install the tires, making sure all the log nuts are tight.



#### Care and Maintenance Recommendations

To protect the appearance of this product, wash with soap and water

[www.ruggedliner.com](http://www.ruggedliner.com)