

RUGGED COVER

Premium Rollup Cover Rail Installation Instructions For Dodge Ram Box


200 Universal Dr. • Owosso, MI 48867 • 989-725-8354 • Fax: 989-725-8409 • 1-800-433-3604

1 PREPARING TO INSTALL SIDE RAILS FOR RC-DRB5509 & RC-DRB6510

Removing End Plugs and Tie-Downs

INSTRUCTIONS:


- A. Remove track system end plugs from both rails.
- B. Remove tie-downs from both track system rails.

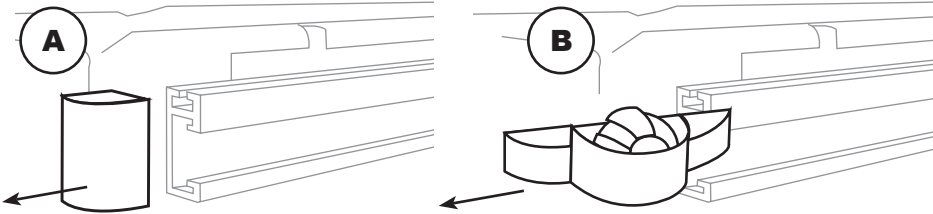

Utility Track Rail Hardware

INSTRUCTIONS:

- C. Assemble hardware as shown

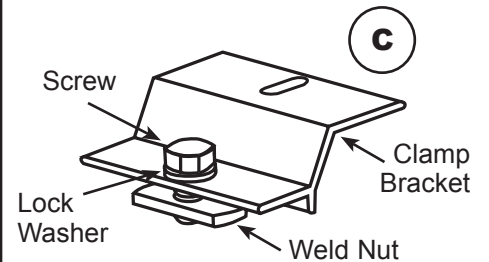


2 UTILITY TRACK RAIL HARDWARE AND CORNER SEAL INSTALLATION

Installing Rail Hardware

INSTRUCTIONS:


- D. Slide three assembled clamp brackets into each track of the driver and passenger side utility track rails.

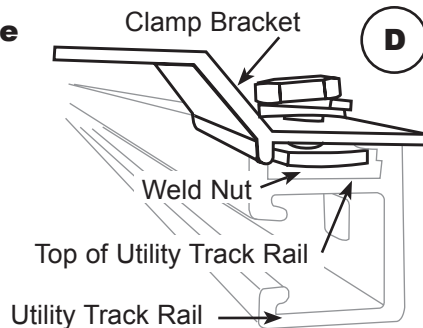

Installing Corner Seal

INSTRUCTIONS:

- E. Apply corner seal to inside front corner of box.



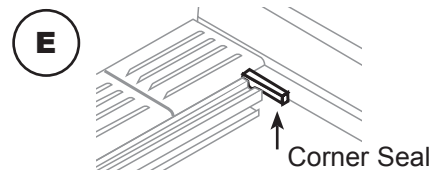


3 INSTALLATION OF SIDE RAILS

Attaching Side Rails To The Brackets

INSTRUCTIONS:

- F. Leave all fastener hardware loose at this time.
(NOTE: Just put the screw for the side rail into the clamp bracket without the washer and nut)
- G. Space utility track rail hardware brackets evenly in top of both track systems.
- H. Align the end of the side rail 1/8" from inside edge of the tailgate.
- I. When you have both rails lined up where you want them, then remove the side rail screw mentioned in step (3F) and tighten all clamp brackets in step 2D.
- J. Reinstall the side rail and install and tighten all screws.

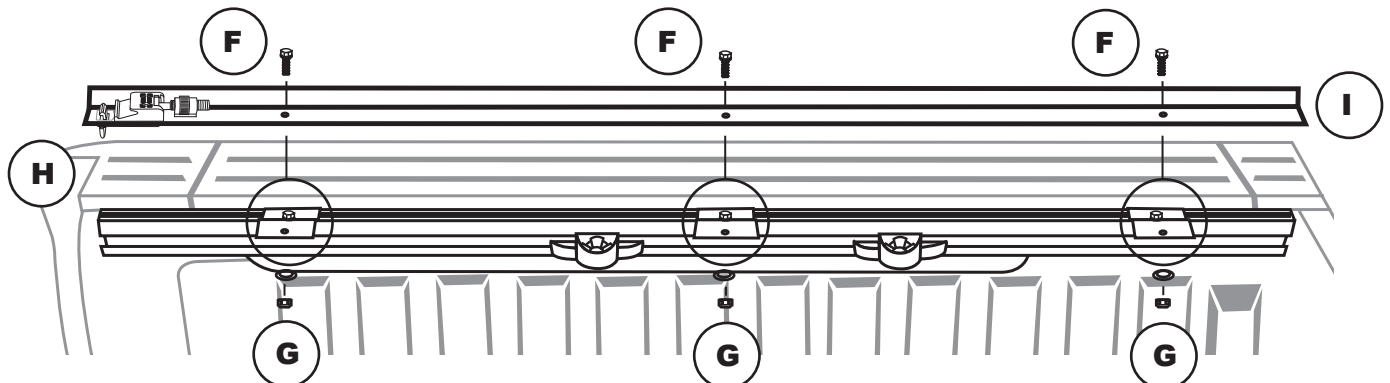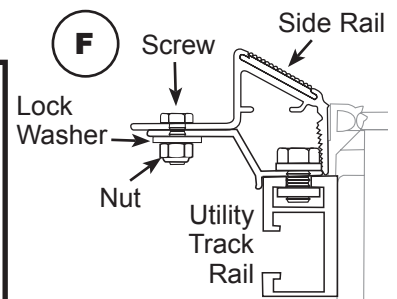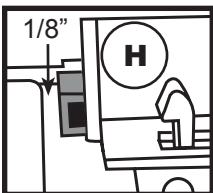


RUGGED COVER

Premium Rollup Cover Rail Installation Instructions For Dodge Ram Box

200 Universal Dr. • Owosso, MI 48867 • 989-725-8354 • Fax: 989-725-8409 • 1-800-433-3604

4 SIDE RAILS INSTALLED

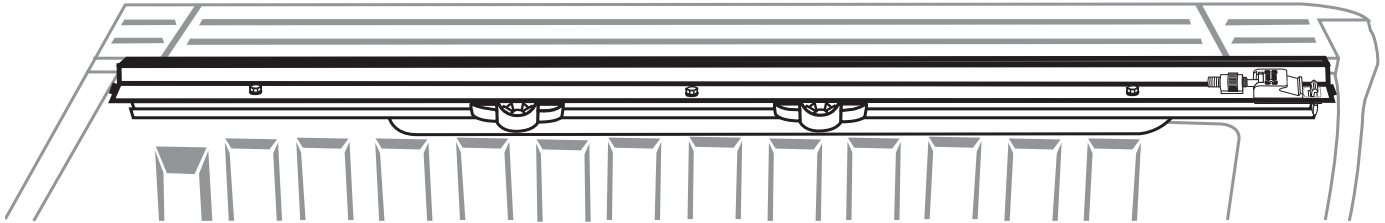


5 INSTALLING FRONT CAB RAIL

Front Rail With Cover

INSTRUCTIONS:

- K Insert front rail stem into hole in front of side rail. Then slide on washer and screw on front release knob tight on both sides.
- L Put Header Seal on top of bulkhead.

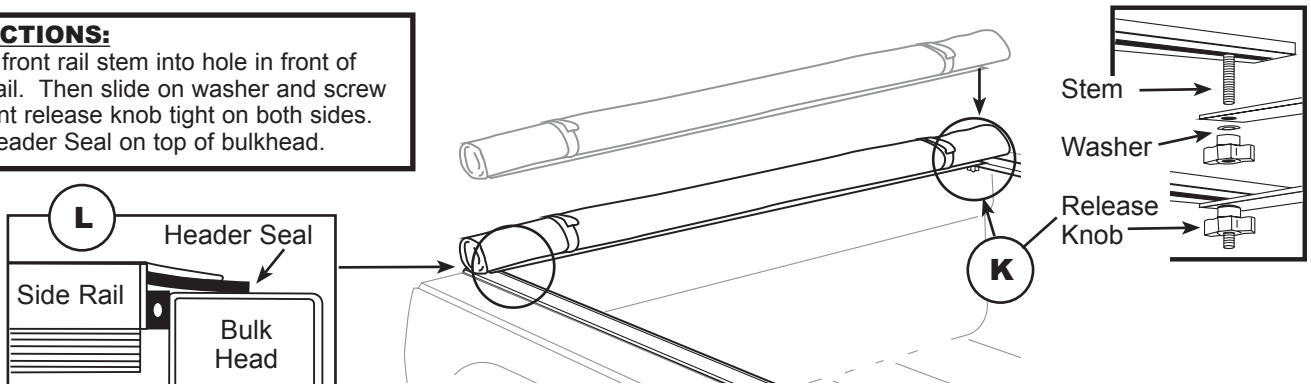

6 TIPS FOR INSTALLING

Adjusting Tensioner

